

車輪

NP-type

NPG型 / NPG-S型 / NPR型 / NPR-S型 / NPT型 / NPT-S型

車輪品番	車輪	車輪径 (mm)	許容荷重 [daN(kgf)]	ボス幅 (mm)	車幅 (mm)	車輪穴径 (mm)
S-100SUE		100	30(30.6)	32	28	8
S-125SUE		125		37.4	32	

車輪

SILENT-type

EF型 / EF-S型 / ER型 / EFT型 / EFT-S型

車輪品番	車輪	車輪径 (mm)	許容荷重 [daN(kgf)]	ボス幅 (mm)	車幅 (mm)	車輪穴径 (mm)
L-65ELSB		65	30(30.6)	24	20	6
L-75ELSB		75	35(35.7)			

車輪

SILENT-type

SFHG型 / SFHG-S型 / SR型 / SFHT型 / SFHT-S型

車輪品番	車輪	車輪径 (mm)	許容荷重 [daN(kgf)]	ボス幅 (mm)	車幅 (mm)	車輪穴径 (mm)
S-100SEL		100	50(51.0)	32	28	8
S-75NRB		75	60(61.2)	32	27	8
S-100NRB		100				

車輪

SILENT-type

SJF型 / SJF-S型 / SK型 / J2F型 / J2F-S型 / K2型 / JF型 / K型

車輪品番	車輪	車輪径 (mm)	許容荷重 [daN(kgf)]	ボス幅 (mm)	車幅 (mm)	車輪穴径 (mm)	
WF-200		200	200(204.0)	56	43	20	
NRB-100(カバー付)		100	100(102.0)	43	32	12	
NRB-130(カバー付)		130	160(163.2)	56	40		
NRB-150(カバー付)		150	180(183.6)				
WF-200-G		200	200(204.0)	56	43	20	
NR-100-G,BC		100	100(102.0)	43	32	12	
NR-150-G,BC		150	180(183.6)	56	40		

※許容荷重は取付ける金具により異なります。※(B入)はペアリング入り車輪を表しています。